

Amp switch MIDI [MARK V] v1.1

EM Custom

1. Switching via Program Change messages

REVERB	SOLO	EQ	FX	MUTE	CH1	CH2	CH3
					PC msg. (0..127)		
○	○	○	○	○	0	32	64
●	○	○	○	○	1	33	65
○	●	○	○	○	2	34	66
●	●	○	○	○	3	35	67
○	○	●	○	○	4	36	68
●	○	●	○	○	5	37	69
○	●	●	○	○	6	38	70
●	●	●	○	○	7	39	71
○	○	○	●	○	8	40	72
●	○	○	●	○	9	41	73
○	●	○	●	○	10	42	74
●	●	○	●	○	11	43	75
○	○	●	●	○	12	44	76
●	○	●	●	○	13	45	77
○	●	●	●	○	14	46	78
●	●	●	●	○	15	47	79
○	○	○	○	●	16	48	80
●	○	○	○	●	17	49	81
○	●	○	○	●	18	50	82
●	●	○	○	●	19	51	83
○	○	●	○	●	20	52	84
●	○	●	○	●	21	53	85
○	●	●	○	●	22	54	86
●	●	●	○	●	23	55	87
○	○	○	●	●	24	56	88
●	○	○	●	●	25	57	89
○	●	○	●	●	26	58	90
●	●	○	●	●	27	59	91
○	○	●	●	●	28	60	92
●	○	●	●	●	29	61	93
○	●	●	●	●	30	62	94
●	●	●	●	●	31	63	95

Note: Some manufacturers use 1-128 range for PC messages (Not compliant with midi specification). In this case you should add 1 to our values

2. Switching via Control Change messages

Function	controller number (0..127)	value (0..127)	
		0..63	64..127
Channel 1	76	-	●
Channel 2	77	-	●
Channel 3	78	-	●
REVERB	80	○	●
MUTE	81	○	●
EQ	82	○	●
FX	83	○	●
SOLO	84	○	●