

Amp switch MIDI [Nomad] v3.0

EM Custom

1. Switching via Program Change messages

SOLO	EQ	REVERB	CH1	CH2	CH3
			PC message (0..127)		
○	○	○	0	8	16
●	○	○	1	9	17
○	●	○	2	10	18
●	●	○	3	11	19
○	○	●	4	12	20
●	○	●	5	13	21
○	●	●	6	14	22
●	●	●	7	15	23

2. Switching via Control Change messages

Function	MSG number (0..127)	value (0..127)	
		0..63	64..127
Channel 1	76		●
Channel 2	77		●
Channel 3	78		●
SOLO	80	○	●
EQ	81	○	●
REVERB	82	○	●